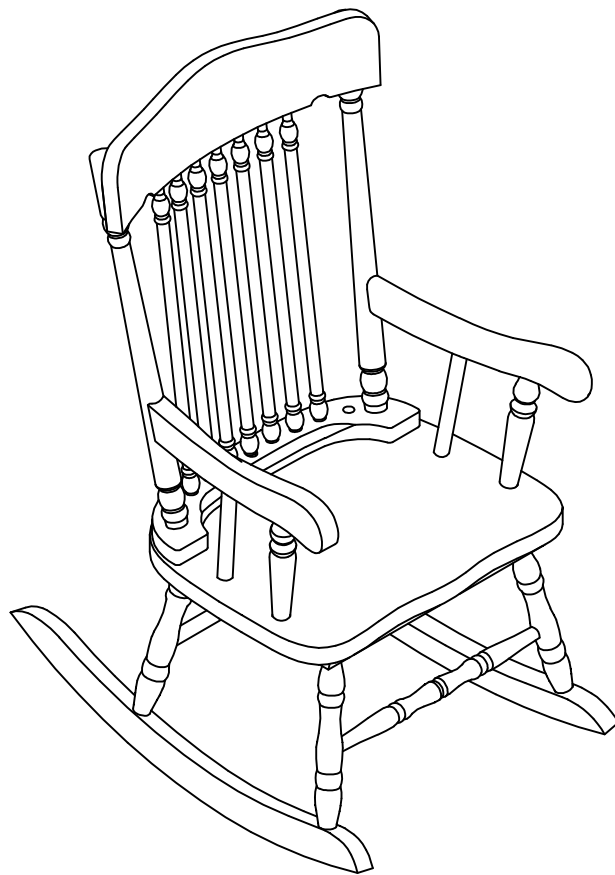


# R4802/4802BW

ROCKER CHAIR

---



# ASSEMBLY INSTRUCTION

## ASSEMBLY TIPS :







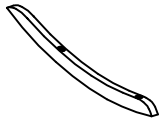


 
 
 
- 1 . Remove hardware from box and sort by size .
- 2 . Please check to see that all hardware and parts are present prior start of assembly .
- 3 . Please follow attached instructions in the same sequense as numbered to assure fast & easy assembly .

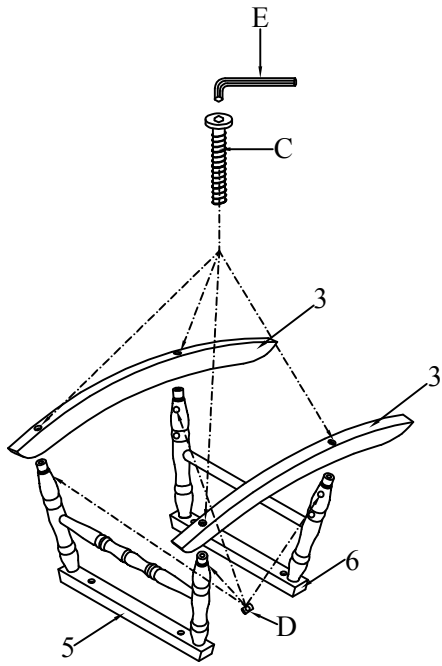


### Warning !

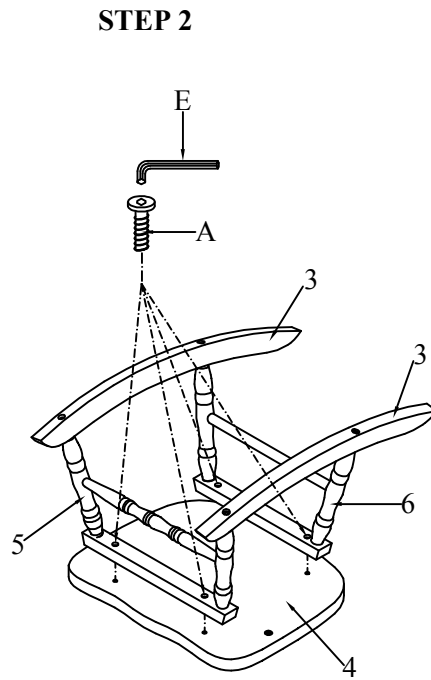
- 1 . Don't attempt to repair or modify parts that are broken or defective . Please contact the store immediately .
- 2 . This product is for home use only and not intended for commercial establishment .

## R4802 ROCKER CHAIR

| HARDWARE LIST |               |   |      | PARTS IDENTIFICATION |                       |   |      |
|---------------|---------------|---|------|----------------------|-----------------------|---|------|
| A             | Ø 3/16"X32mm  |  | 9PCS | 1                    | CHAIR BACK            |  | 1PCS |
| B             | Ø 3/16" x50mm |  | 2PCS |                      |                       |   |      |
| C             | Ø 3/16" x63mm |  | 4PCS | 2                    | ARM REST (LEFT&RIGHT) |  | 2PCS |
| D             | Ø 3/16" x10mm |  | 6PCS | 3                    | LEG (LEFT&RIGHT)      |  | 2PCS |
| E             | M4            |  | 1PC  |                      |                       |   |      |
| F             | Ø 10.5mm x7mm |  | 5PCS | 4                    | CHAIR SEAT            |  | 1PC  |
|               |               |   |      | 5                    | FONT STRETCHER        |  | 1PC  |
|               |               |   |      | 6                    | BACK STRETCHER        |  | 1PC  |



STEP 3



STEP 4

